


20RD

RED DOT SIGHT

The 20RD is the perfect red dot sight for anyone in need of a lightweight and compact optics for a low price. This sight has a 2 MOA dot to get you on target and keep you there. The durable housing is both shock and fog resistant. For a sight that won't let you down - when you need it the most - at a price that won't break the bank, choose the 20RD miniature red dot sight.

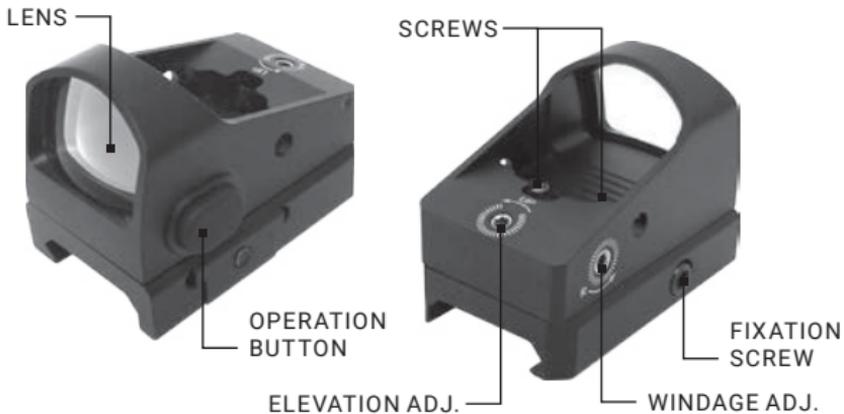

OPERATING INSTRUCTIONS

1. Press operation button to turn power on.
2. Adjust the reticle brightness. There are 6 brightness levels. After the sight is on, the brightness level is 6. Press the operation button to reduce the level to 5, then press again to change the brightness to level 4, and etc. to level 1. Next pressing the button will set level 6 and so on by the cycle.
3. To turn the power off hold the button for 3 seconds.

MOUNTING ONTO A PICATINNY RAIL

The 20RD can be attached to the Picatinny/Weaver rail. To do this, loosen the fixation screw first. Place the sight onto the rail and tighten the fixation screw.

BORESIGHTING


The bore sighting of the 20RD can be performed by rotating the elevation and windage adjustments.

1. Mount the sight on the weapon. Secure or hold the weapon in a steady position.
2. Take aim at the center of the target from 25 to 50 yards away using the weapon's iron sight.
3. Activate the 20RD reticle. View through the 20RD and turn the windage and elevation adjustments until the reticle moves into the center of the target.
4. Fire a series of shots to verify point of aim is accurate. Make additional windage and elevation adjustment if necessary.

BATTERY REPLACEMENT

The 20RD sight is powered by one CR2032 3V Lithium battery (pre-installed). If the reticle grows dim or does not light, the battery needs to be replaced.

To install a new battery, loosen two screws on the top panel. Remove the top section of the sight and insert the battery ("+" side up). Align the pins and replace the top section. Tighten two screws on the top panel.

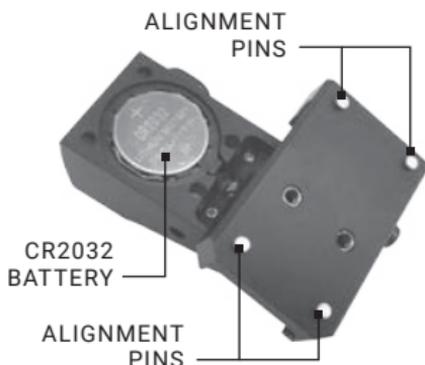

WARRANTY INFORMATION AND REGISTRATION

Please visit our website for warranty information and registration.

In order to validate the warranty on your product, the customer must complete and submit AGM Global Vision PRODUCT REGISTRATION FORM on our website (www.agmglobalvision.com/customer-support).

AGM Global Vision

173 West Main Street, PO Box 962

Springerville, AZ 85938, USA

Tel. 928.333.4300

Fax 480.393.4882

info@agmglobalvision.com

www.agmglobalvision.com

European Office

Andrey Lyapchev #7

Sofia, P.C. 1756

Bulgaria

Tel. +44.292.255.0509

info@agmglobalvision.eu

www.agmglobalvision.eu